

Fitting Instructions - Clutch Set-up

1. Getting the correct clutch set-up, install all clutch parts on the engine side.
2. Fit on the bellhousing and measure from the housing face to the finger tips on the pressure plate. (Distance A)
3. On the transmission side, install the clutch bearing and carrier onto the front flange and measure from the bearing face to the transmission face. (Distance B)
4. Subtract distance (A) from distance (B). This is the bearing height for the correct clutch adjustment.
5. Subtract another 3mm allowing clutch wear for the pressure plate fingers.
6. If fitting either a bearing spacer or adjusting the pivot call can achieve this position.

